

Pro-Tek®

Impact Protection Systems

Specialty Corner Guards

Installation of:

CG-50, CG-55, CG-60, CG-65, CG-51, CG-52 (Stainless Steel) and CG-400, CG-401, CG-402, CG-403, CG-404, CG-405 (Aluminum)

(Adhesive, double faced tape, or metal screws must be specified.)

1. Remove loose particles and dust.
2. With caulking gun, apply a double bead of adhesive (1/8" - 3/8") approximately 3/4" from outside edge of each flange. (Adhesive is supplied.)
3. Press guards firmly to wall surface from floor upward and clean off any excess adhesive with mineral spirits.
4. After 48 hours, remove protective covering.

OR



Install with oval head screws and cup washers through pre-punched holes.

Installation of Lexan:

CG-16, CG-17, CG-18, CG-19, CG-22, CG-23, CG-24, CG-25, and CR-3, CR-4 Chair Rail with screws

(Adhesive, double faced tape, or metal screws must be specified.)

These corner guards and chair rails are made from clear Lexan and are highly impact resistant. Guards are supplied with pre-drilled holes and chrome plated phillips head screws on all models except CG-16 which are undrilled with chrome plated drive nails. The clear Lexan allows the color of the wall to show through. Companion wall guard strips (Styles CR-3, CR-4) are available and may be installed with Toggler Alligators® into drywall or chrome plated drive nails or chrome plated phillips head screws.

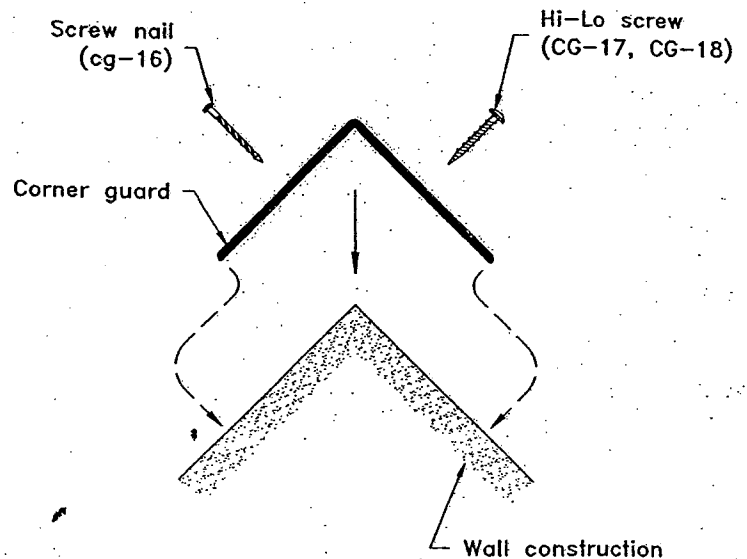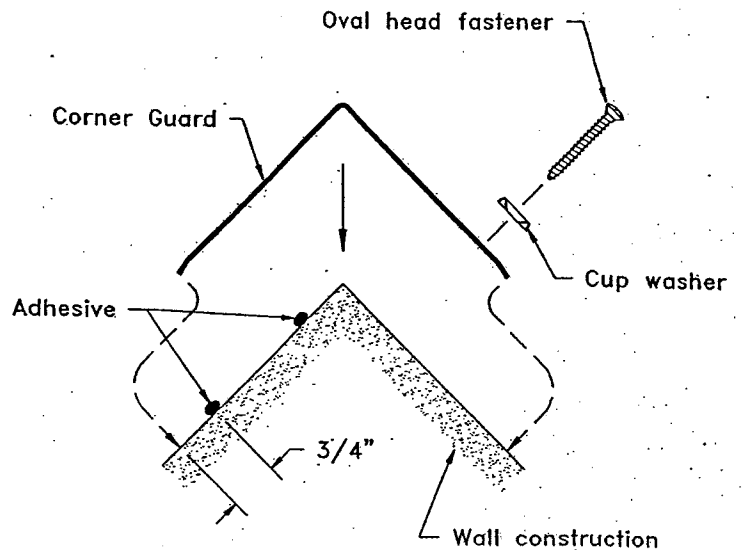

Specifications subject to change without notice.



ARCHITECTURAL PRODUCTS DIVISION

Wall Protection Systems
Entrance Mats And Gratings
Athletic Flooring Systems
Industrial Impact Protection Systems

Pawling Corporation
32 Nelson Hill Road
PO Box 200
Wassaic, NY 12592
sales@pawling.com

Tel. 800-431-3456
Fax 800-377-4403
Tel. 845-373-9300
Fax 845-373-7827