

## CGWS-275, CGWS-275B, CGWS-2751 Wood/SS Corner Guard Series

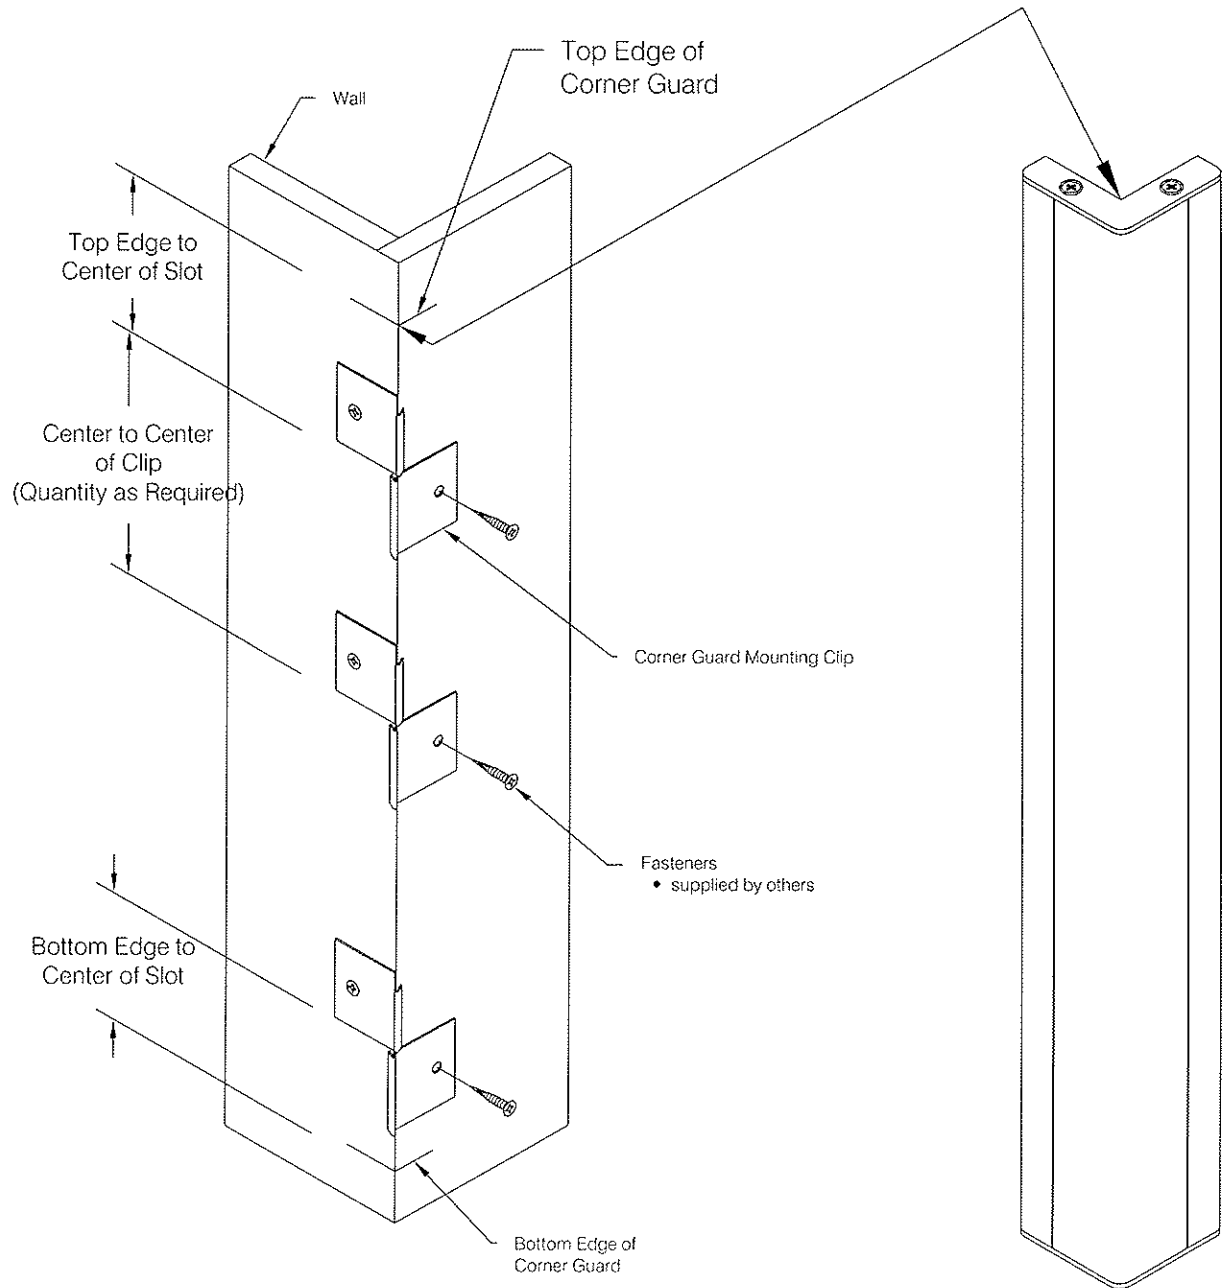


Fig 2

Fig 1

**CGWS-275, CGWS-275B, CGWS-2751**  
**Wood/ Stainless Steel**  
**Corner Guard Installation Instructions**

**Step 1:** This series of corner guards is available as a complete assembly. There are no required alterations they are to be mounted as is. See **fig 1**.

**Important:** Store material in a clean dry place where the temperature is maintained above 50°F (10°C). Walls and rooms should be maintained at a minimum of 65°F (18°C) for at least 48 hours prior to installation. Acclimate materials to normal building conditions for at least 24 hours before and installing.

**Step 2:** To mount clip to wall. See **fig 2**. Determine the height of the corner guard and mark the location on the wall. The required quantity of clips will vary with the length of the corner guard. A minimum of, two clips are required for each corner guard. For the minimum number of clips, measure to the slot space on the backside of corner guard at the top and bottom. Center the corner guard clip to the slot and mount on wall using hardware according to **Step 3**.

For the longer corner guards evenly space the clips according to the chart below.

Length of Corner Guard	Number of Clips
Up to 3'-6"	2
4'-0" to 6'-0"	3
6'-0" to 8'-0"	4

**Step 3:** To mount corner guard clip to wall with the appropriate hardware according to wall construction.

*Drywall Installation:* If it is necessary to install fasteners in locations where there is no metal backing or stud use pre-drilled aluminum as a template to mark and drill wall for plastic Alligator® insert in accordance with instructions provided with hardware.

*Masonry Installation:* Using the pre-drilled aluminum as a template, mark and drill the wall at all pre-drilled holes to accept hardware listed below.

**Suggested hardware diameter and type :**

- Drywall with studs : #8 Drill point sheet metal or drywall screw.
- Drywall without stud or backing : Plastic Alligator® insert with #8 sheet metal or drywall screw. Drill in accordance with instructions provided with hardware.
- Masonry : Plastic Alligator® insert with #8 sheet metal or drywall screw. Drill in accordance with instructions provided with hardware.

**Step 4:** To mount corner guard on to the clip, position the corner guard and carefully push or tap towards the wall. Remove film from stainless steel.

**Important:** Make sure the clips are secure and in the proper location before pushing the corner guard on the clips. Once the corner guard is mounted it cannot be removed without damaging the product.